

125° hinge

Web code

DQDJIM



Planning

Hinge dimensions and gap calculation based on factory setting (mounting plate spacing = 0 mm)

Hinge and front protrusion at 90° opening angle

Overlay application

0-protrusion

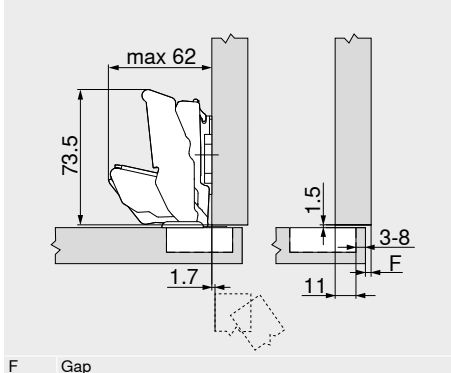

F Gap

Drilling distance TB

Front overlay FA (mm)																		
MD		5	6	7	8	9	10	11	12	13	14	15	16	17	18	19		
0												3	4	5	6	7	8	
3									3	4	5	6	7	8				
6					3	4	5	6	7	8								
9	3	4	5	6	7	8												


MD Mounting plate spacing (mm)

Minimum gap F for fronts with a front radius (R = 1 mm) based on the factory setting


Drilling distance TB (mm)	Front thickness FD (mm)											
	29	30	31	32	33	34	35	36	37	38	39	40
3	0	0	0	0.1	0.3	0.7	1.2	2.0	2.8	4.1	5.7	
4	0	0	0	0.1	0.4	0.8	1.5	2.3	3.4	4.9		
5	0	0	0	0.1	0.4	1.0	1.7	2.8	4.2			
6	0	0	0	0.1	0.6	1.2	2.1	3.5				
7	0	0	0	0.2	0.7	1.6	2.8					
8	0	0	0	0.3	1.0	2.0						

We recommend a trial application for an overlay application against a wall
 92° Opening angle stop


Screw-on

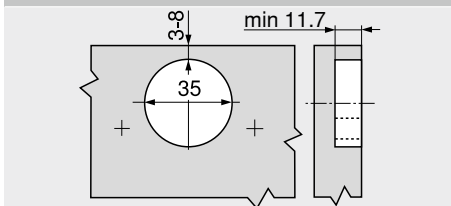

Knock-in

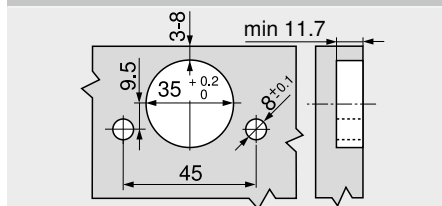

Hinge boss dimensions

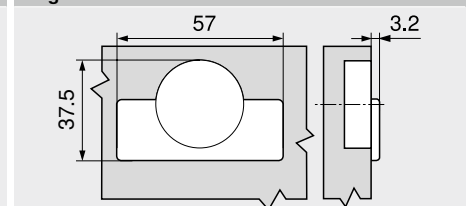

Reference pages

Overview – CLIP top BLUMOTION CLIP top – hinges	71
Mounting plates	144
Accessories – hinge arm cover cap	151
Accessories – general	153
Overview – assembly devices	591
More technical details	698

Assembly, removal and adjustment

Short URL
www.blum.com/a210

