

Mini-hinge

Web code



DQDPUM

Planning

Hinge dimensions and gap calculation based on factory setting (mounting plate spacing = 0 mm)



Hinge and front protrusion at full opening angle

Overlay application

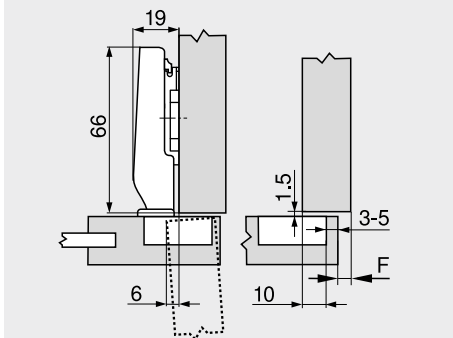



F Gap

Dual application

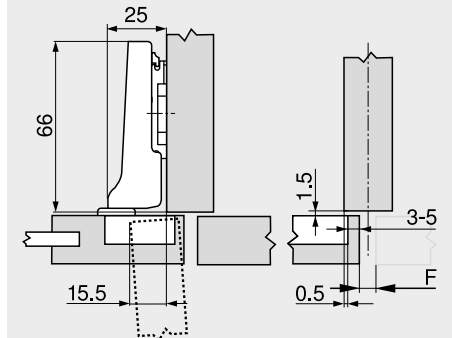

F Gap

Inset application

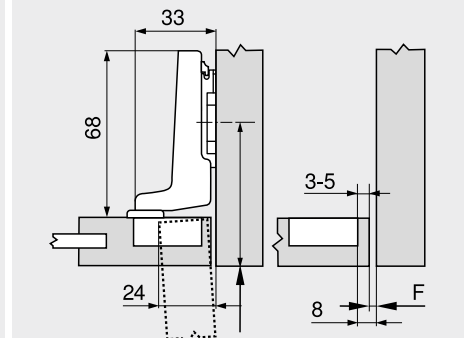

F Gap

Move back fixing position of mounting plate by front thickness
FD +1.5 mm

Drilling distance TB

Front overlay FA (mm)															
MD	4	5	6	7	8	9	10	11	12	13	14	15			
0										3	4	5			
3							3	4	5						
6				3	4	5									
9	3	4	5												
MD Mounting plate spacing (mm)															

Front overlay FA (mm)															
MD	-5.5	-4.5	-3.5	-2.5	-1.5	-0.5	0.5	1.5	2.5	3.5	4.5	5.5			
0															
3								3	4	5					
6				3	4	5									
9	3	4	5												
MD Mounting plate spacing (mm)															

Front overlay FA (mm)															
MD															
0															
3															
6															
9															
MD Mounting plate spacing (mm)															


Minimum gap F for fronts with a front radius (R = 1 mm) based on the factory setting

	Drilling distance TB (mm)	Front thickness FD (mm)											
		16	18	19	20	22	23	24	26	28	30	31	32
	3	1.1	2.2	3.0	3.8	5.5	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	4	1.1	2.0	2.7	3.5	5.0	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	5	1.1	1.8	2.4	3.0	4.6	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Δ In these cases a trial is recommended													


Adjustment

Max. ±3.0 mm See mounting plates	+0.5 mm -3.5 mm	+3.0 mm -1.0 mm

Screw-on

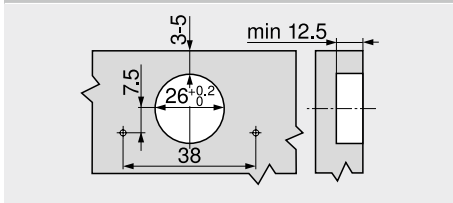

Hinge boss dimensions

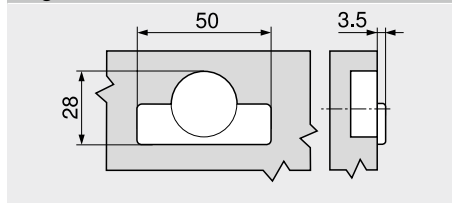

Reference pages

Overview – CLIP top BLUMOTION CLIP top – hinges	71
Mounting plates	144
Accessories – hinge arm cover cap	151
Accessories – general	153
Overview – BLUMOTION for doors	157
Overview – TIP-ON for doors	171
Overview – assembly devices	591
More technical details	698

Assembly, removal and adjustment

Short URL
www.blum.com/a210

