
TANDEM full extension with BLUMOTION – 560H

Web code DQD1XA


Planning

Space requirement in cabinet

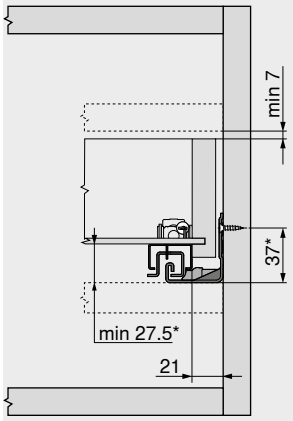


* +3 mm with side stabilisation

Drawer | inner drawer

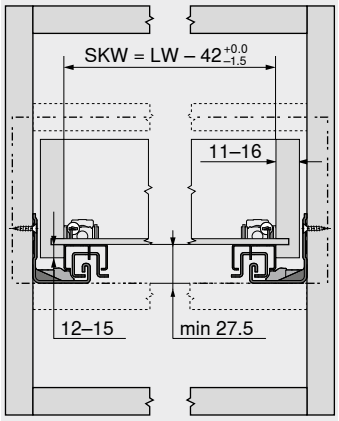


SKW Internal drawer width
LW Internal cabinet width

Drawer

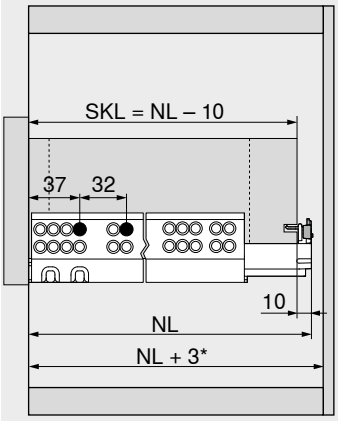

SKL Drawer length
NL Nominal length
* Additional +12 mm with side stabilisation

Inner drawer

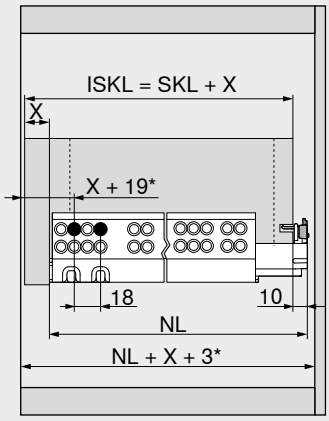


ISKL Inner drawer length
SKL Drawer length
NL Nominal length
X Front thickness
* Additional +2 mm with POSISTOP


Hole spacing – runners

Runner – 560H – 30 kg
Nominal length NL (mm)


250 | 270
300 | 320 | 350 | 380
400 | 420
450 | 480
500 | 520 | 550
600

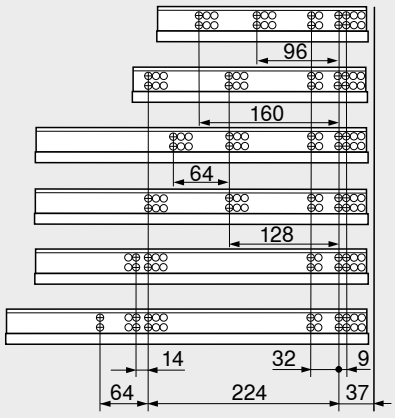

Drawer assembly

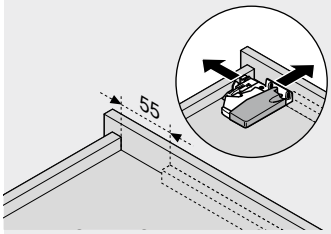

Use drilling template T65.1000.02

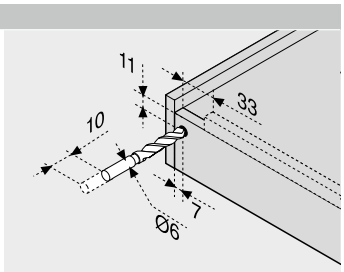

Use drilling template T65.1000.02

Reference pages

Overview	447
SERVO-DRIVE for MOVENTO | TANDEM	492
CABLOXX	582
Accessories	482
Attachment of runners	490
E-SERVICES and assembly devices	590
More technical details	698

Assembly, removal and adjustment

Short URL
www.blum.com/a420