107° hinge


Web code DQDFZY

Planning

Hinge dimensions and gap calculation based on factory setting (mounting plate spacing = 0 mm)


Hinge and front protrusion at full opening angle

Overlay application

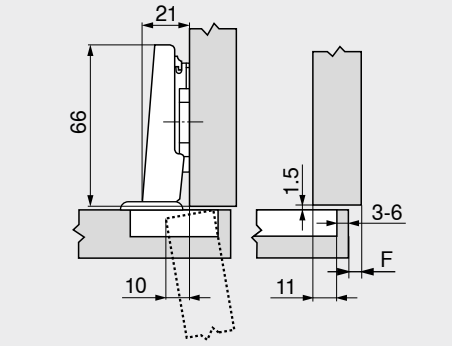


F Gap

Dual application

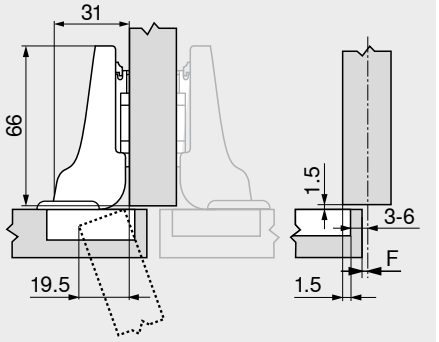

Inset application

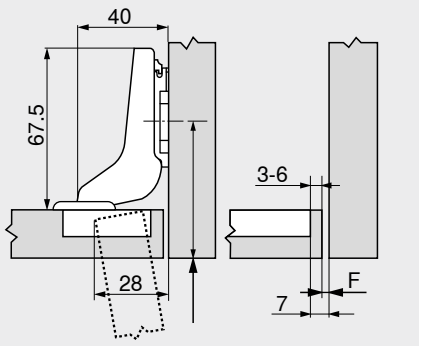

Move back fixing position of mounting plate by front thickness FD +1.5 mm

Drilling distance TB

MD	Front overlay FA (mm)												
	5	6	7	8	9	10	11	12	13	14	15	16	17
0										3	4	5	6
3							3	4	5	6			
6				3	4	5	6						
9	3	4	5	6									

MD Mounting plate spacing (mm)

MD	Front overlay FA (mm)												
	–4.5	–3.5	–2.5	–1.5	–0.5	0.5	1.5	2.5	3.5	4.5	5.5	6.5	7.5
0										3	4	5	6
3							3	4	5	6			
6				3	4	5	6						
9	3	4	5	6									

MD Mounting plate spacing (mm)

MD	Front overlay FA (mm)							
	–7	–6	–5	–4	–3	–2	–1	
0				3	4	5	6	
3	3	4	5	6				
6								
9								

MD Mounting plate spacing (mm)


Minimum gap F for fronts with a front radius (R = 1 mm) based on the factory setting



Drilling distance TB (mm)	Front thickness FD (mm)											
	15	16	18	19	20	21	22	24	26	28	30	32
3	0.4	0.5	1.0	1.3	1.6	2.1	2.7	4.3	▵	▵	▵	▵
4	0.4	0.5	0.9	1.2	1.5	2.0	2.5	3.9	▵	▵	▵	▵
5	0.3	0.5	0.9	1.2	1.4	1.8	2.3	3.6	▵	▵	▵	▵
6	0.3	0.5	0.8	1.1	1.4	1.7	2.2	3.3	▵	▵	▵	▵
Additional for +2 mm side adjustment												
	+0.1	+0.1	+0.2	+0.2	+0.3	+0.3	+0.3	+0.3				

▵ In these cases a trial is recommended

Adjustment

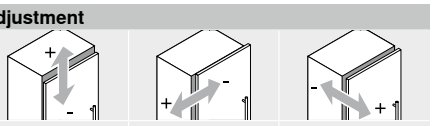


Max. ±3.0 mm
See mounting plates


±2.0 mm

+3.0 mm
–2.0 mm


Screw-on

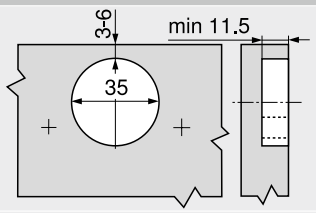

INSERTA | knock-in

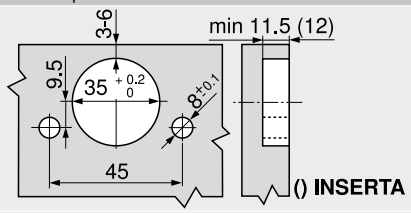

Hinge boss dimensions

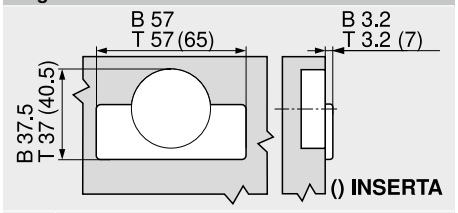

B CLIP top BLUMOTION
T CLIP top

Reference pages

Overview – CLIP top BLUMOTION | CLIP top – hinges	71
Mounting plates	144
Accessories – hinge arm cover cap	151
Accessories – general	153
Overview – BLUMOTION for doors	157
Overview – TIP-ON for doors	171
Overview – assembly devices	591
More technical details	698

Assembly, removal and adjustment

Short URL
www.blum.com/a210